

551

MIDI TO VOLTAGE CONVERTER

Rotary switch to select the Midi modulation source, which appears as a control voltage at the "Controller"-jack. In addition the module sets itself to the Midi channel of the attached Midi source device (e.g. keyboard) if in position "Ch. Select"

Output for the keyboard-control voltage (according to the Midi note-number)

Output for the "Controller"-voltage

Output for the keyboard gate signal

Output for the pitch bend voltage

Indicator LEDs for gate- and controller activity

Output for the modulation wheel voltage

Output for the velocity control voltage

Switch to select keyboard priority

Addition of pitch bend voltage

Legato-mode on/off

Midi activity indicator at Midi-input

Midi-input

Midi-thru



The M 551 is a module, which transforms an attached Midi signal into a couple of analogue control voltages. Thereby modular synthesizers can be integrated into a Midi-network and controlled by Midi-master-keyboards or Midi-hardware- or software-sequencers/DAWs.

The M 551 derives the following six control voltages from the fed Midi-messages:

- **Keyboard CV** (from Midi-note-number)
Depending on the 'Priority' switch, the lowest, highest or last received note-on message is getting transformed.
Voltage range: -2/+8 V
- **Gate** (from the current Midi note-on/note-off commands)
- **Velocity** (transforms the key velocity [note-on velocity] of the current note-on message)
Voltage range: 0-10 V
- **Mod. Wheel** (derives a control voltage from Midi-modulation messages [Controller 1].)
Voltage range: 0-10 V
- **Pitch Wheel** (control voltage from the Midi pitch bend commands, bipolar)
Voltage range: ± 5 V
(If "Add Bend CV" is active, a pitch bend voltage of $\pm 0,5$ V is added internally to the keyboard control voltage).
- **Controller** (transforms a selectable Midi controller into a control voltage [0-10 V])

Available are:

- After touch
- Breath controller (CC 2)
- Foot pedal (CC 4)
- Sustain pedal (CC 64)
- Panorama (CC 10)
- Main volume (CC 7),
- the unspecified parameters CC 20, CC 21, CC 22.

The functions of the three toggle switches are:

- **Add Bend CV**
In 'on'-position the Midi Pitch bend voltage (attenuated to ± 0.5 V) is added internally to the keyboard voltage to ease pitchbending the oscillator

- **Priority**
Keyboard control voltage/gate signal/velocity voltage are derived from the highest/lowest/last received note-on message

- **Keyboard Mode**

Retrig triggers a new keyboard control voltage/gate signal combination at any struck key

Legato starts a new event not before all keys are released


To select the **Midi-Channel**: Dial the rotary switch to the „Channel Select“ position and initiate a MIDI-channel message (e. g. strike a note on a keyboard); the module sets itself to the most recently received MIDI channel (this setting is saved even if the unit is switched off)

551

MIDI TO VOLTAGE CONVERTER

Power supply
input for COTK
cable adapter

Power supply input
for synthesizers.com
cable adapter

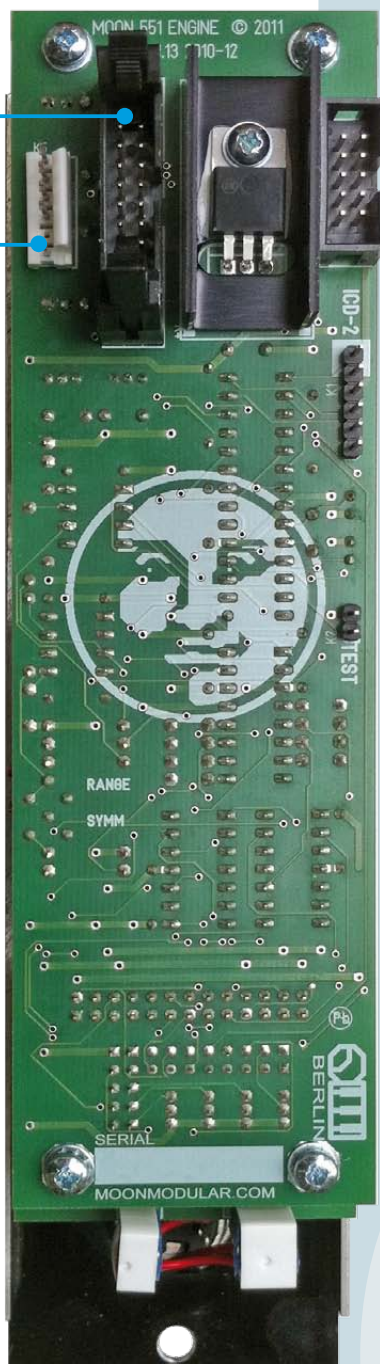

Operating voltage
-Voltage = -15 volts
+Voltage = +15 volts